

# bercoweld®


## Use of bercoweld® wire in a drum or in the bedrabox

### Please note the following instructions

#### STEP 1

The drum or bedrabox can be opened as usual. It is supplied with a black transport lock comprising foam lips, a rod, and a rubber ring. The rod can be loosened and placed inside the inner tube.

Before removing the wire, check the wear parts that come into contact with the wire for damage and replace them if necessary.

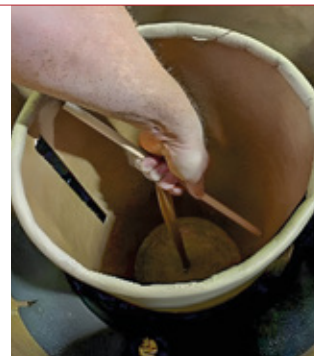

#### STEP 2

Only now should you detach the wire from the inner tube. Insert the wire into the existing unwinding aid that is already integrated into the hood. Then guide the wire through the hose package.

Once the wire has passed through the first hose package, the hood can be finally secured.



#### STEP 3

The wire is now fed further through the hose package. Once it has passed through the first hose package, the hood can be permanently attached.

The machine operator then pushes the wire through the hose package until it emerges at the nozzle.



**The drum or bedrabox is now ready for use.**



Berkenhoff GmbH  
Berkenhoffstr. 14  
35452 Heuchelheim  
Germany

Tel.: +49 2772 5002 0  
Fax: +49 2772 5002 155  
info@bedra.com  
[www.bedra.com](http://www.bedra.com)

**bedra**  
intelligent alloys